 


Momushk[®]

Baby Rocking Chair

User Manual

Execution Standard: Q/DPKJ 001-2024

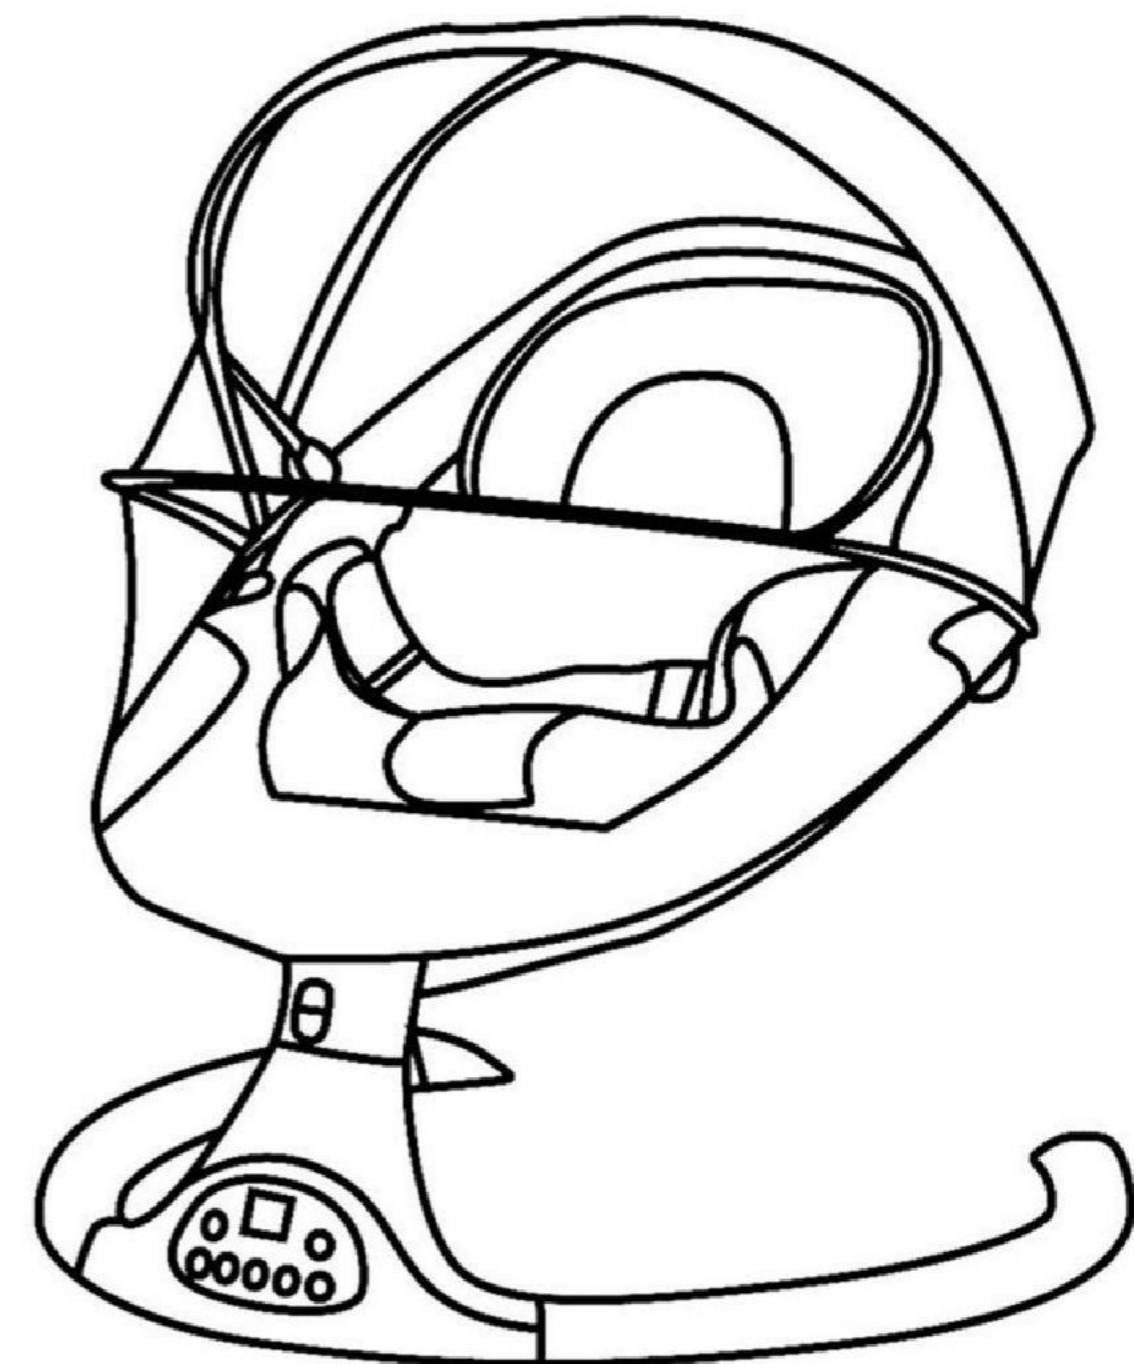

Please read this manual carefully before installation and use, otherwise it may affect the safety of the child.

Table of Contents

一、 Table of Contents.....	1
二、 Product Specifications	2
三、 Understanding the Product	3
Product List	3
Product Structure	3
Cleaning and Washing.....	4
Assembly Instructions.....	4
Safety Instructions.....	5
Product Power Supply	5
四、 Using the Product.....	6
Function Usage	6
Remote Control Instructions.....	7
Panel Instructions.....	7
Battery Installation Instructions.....	8
五、 Precautions	9
Common Faults and Troubleshooting	10
六、 After-sales Service	11
七、 Certificate of Conformity	12

Product Specifications

Product Specifications

Product Name	functional Electric Rocker		
ITEM NO.	DP-016/DP-017/DP-018		
Rated Input Voltage	5V==	Suitable Age	0-12month
Rated Input Current	1000mA	Load Capacity	9KG
Rated Power	5W		
USB Output	5V==200mA		
Execution Standard	Q/JXQH 001-2023		
Production Date	Indicated on the packaging or product body		

△Note

- 1) Do not short-circuit the power terminals.
- 2) Please use a USB port phone charger (adapter) to power the product.
- 3) Keep the adapter away from children when using it.
- 4) Regularly check the power cord plug, accessories, and other parts of the rocker's adapter. If any damage is found, stop using it

Understanding the Product

Product Specifications


Please check the contents before use. If any items are missing, please contact the seller.

No.	Name	Quantity
A	Base	1
B	Seat Frame Assembly	1
C	Canopy Assembly	Optional

Accessories: Manual×1, Type-C cable×1
Remote control×1

Product Structure

*The images in this manual may differ from the actual product. Please refer to the actual contents.

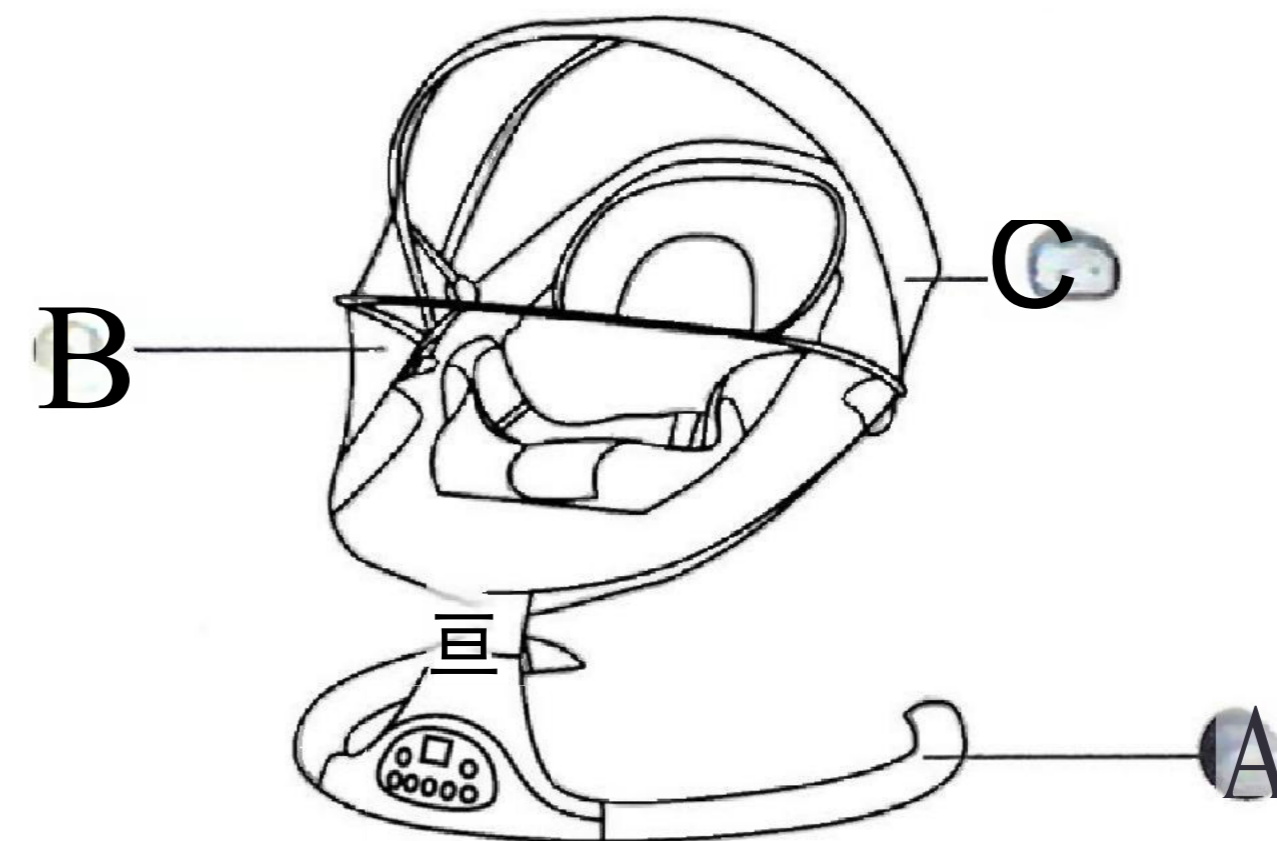

Understanding the Product

Warning! This product can only be assembled and cleaned by adults

Cleaning and Washing

Seat Frame Assembly: Remove the seat frame assembly and hand wash with cold water.

Toys: When hand washing or machine washing, rinse with water and add mild detergent,

scrub with a soft brush; rinse

with clean water and dehydrate, or directly put into the washing machine for cleaning and dehydration, and place in a cool place to dry.

Fabric: Velvet, hand wash, do not iron.

Inner Filling: Fire-resistant hard resin cotton. **Warning! Do not bleach, dehydrate, or dry.**


Maintenance

Please perform regular maintenance on this product. Check the tightness and safety of the connections of the rocker and the frame. If any abnormalities are found, stop using it.


This product contains electronic components and should not be immersed in water or placed in a humid environment. Please disconnect the power before cleaning.

Assembly Instructions

Insert the seat frame assembly into the seat frame assembly, optional①, or

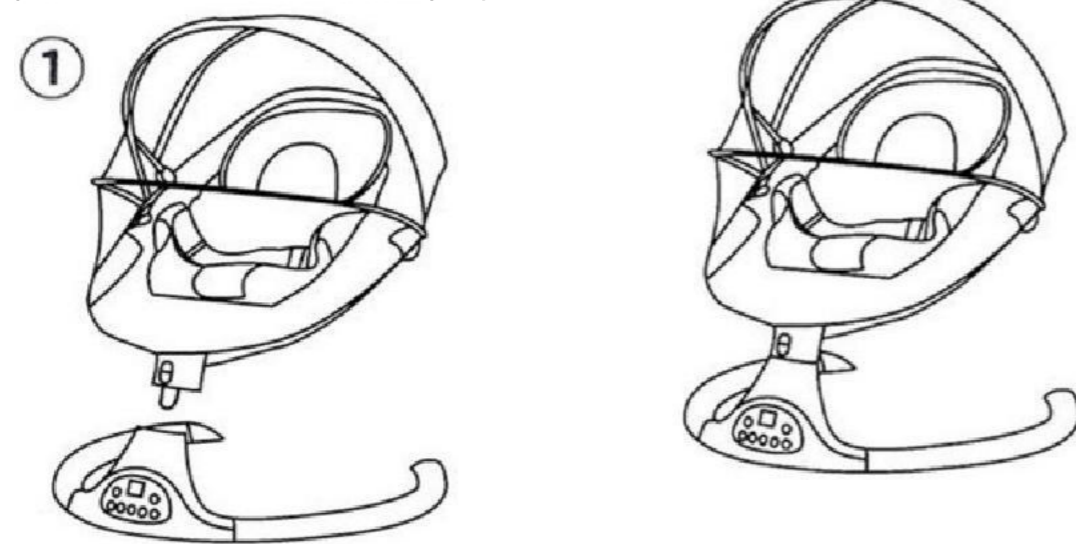

Toy Installation: Attach the two toys to the hooks on the inside of the canopy and stick the toy covers.

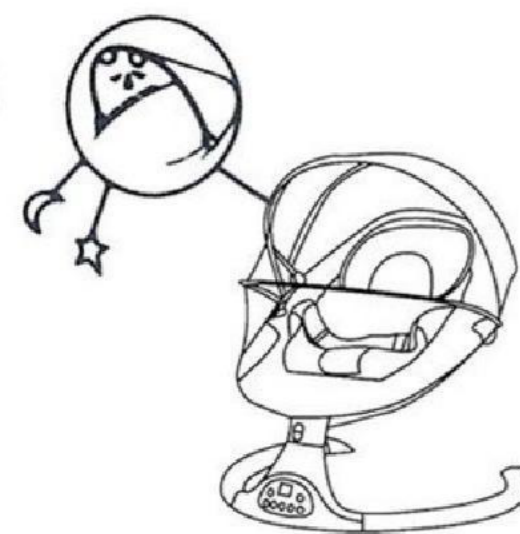

To remove the seat,
Pull the metal block on the cover plate and pull it out.




4

Understanding the Product

Safety Instructions


As shown in the figure, fasten the straps on the adjustment buckle and adjust to the desired length.

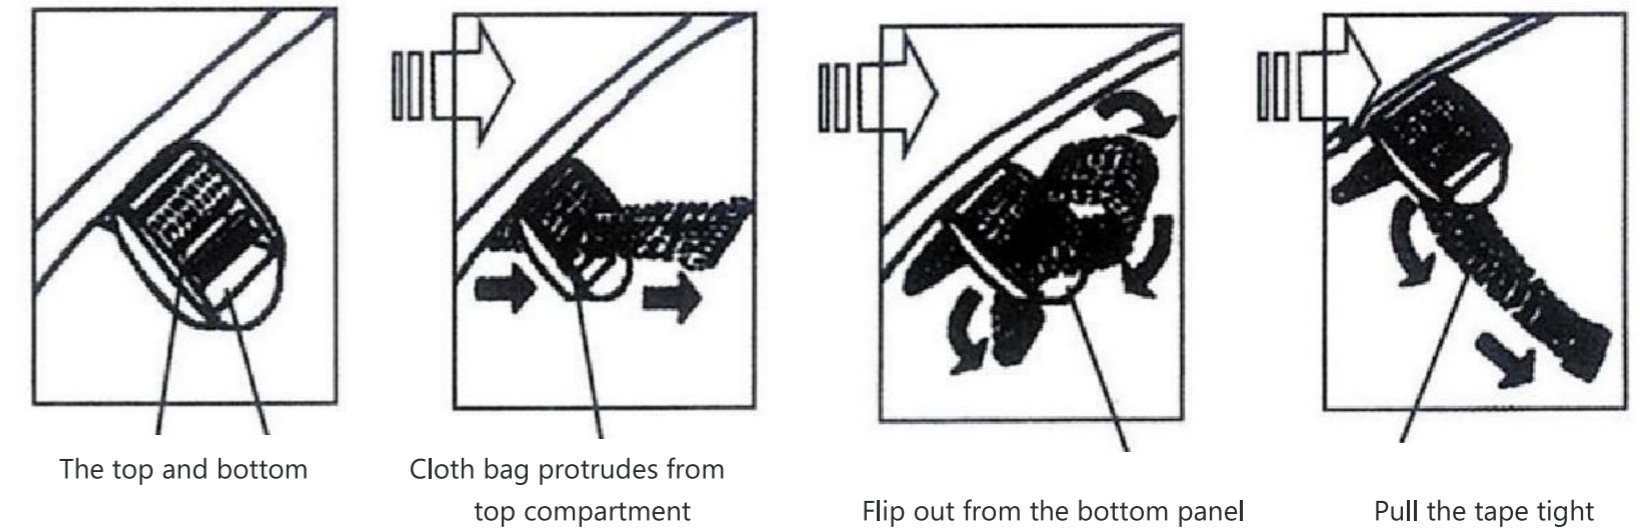

Place the baby in the seat cloth, fasten the safety buckle, and cover the cloth.



Product Power Supply

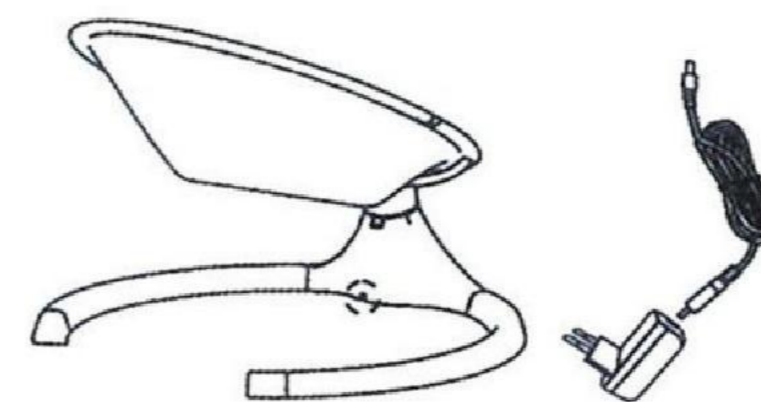


1. Type-C plug can be inserted into 100-240V ~50/60Hz AC power.
2. Type-C interface can be connected to a power bank for power supply.
3. Adapter output parameters voltage 5V—current 1A, do not use other specifications of adapters.
4. Dry battery power supply: AAA (size 7 battery) 1.5V*4.
5. USB port can connect external music.

5

Using the Product

Function Usage


- - (1) Power switch button 1. Press once, the indicator light turns on, power is on.
2. Press again, the indicator light turns off, power is cut off.
- - (2) Gear increase/decrease button: There are 5 gear options, starting from the stop gear and increasing in a loop. The current gear corresponds to the on and off of the gear indicator light.
The angles increase by approximately 0°, 18°, 21°, 23°, 25°, 31° (no load), the load will slightly decrease; Note 1. When the gear is in neutral and there is no timing, the gear indicator light and timing light will flash in a flowing manner;
2. When a jam is detected, the gear will automatically shut off and the gear indicator light will flash to remind.
- - (3) Timer button: Press once, the first indicator light turns on for 8 minutes
Press again, the second indicator light turns on for 15 minutes
Press again, the third indicator light turns on for 30 minutes
When the timer ends, all functions stop and enter standby mode;
If the timer function is not activated, other activated functions will work indefinitely until the battery runs out;
Note 1. When the gear is in neutral and there is no timing, the gear indicator light and timing light will flash in a flowing manner.
- - (4) Music playback/volume button: Press once to start playing system music;
Short press to play the next song;
Long press to hear the volume change and adjust the volume in a loop;
Press for more than 2 seconds to turn off the music.
- - (5) Motion control mode: Can enter or exit motion control mode, will also automatically enter motion control mode when the timer ends.
Turn on the timer, when the timer ends, it will enter motion control mode and light up the motion control light.
In motion control mode, when a slight movement is detected on the right side, it will automatically rock,
Enter gear 1, timer 8 minutes, and start music.
- - (6) Bluetooth connection: Turn on the phone's Bluetooth and connect to "BT-BABY/S0008". After successful connection, songs can be played directly.
- - (7) MODE key is the switch key between internal music and USB or Bluetooth, and is invalid when there is no USB or Bluetooth.
- - (8) If special display is needed, please check if the machine is placed flat.

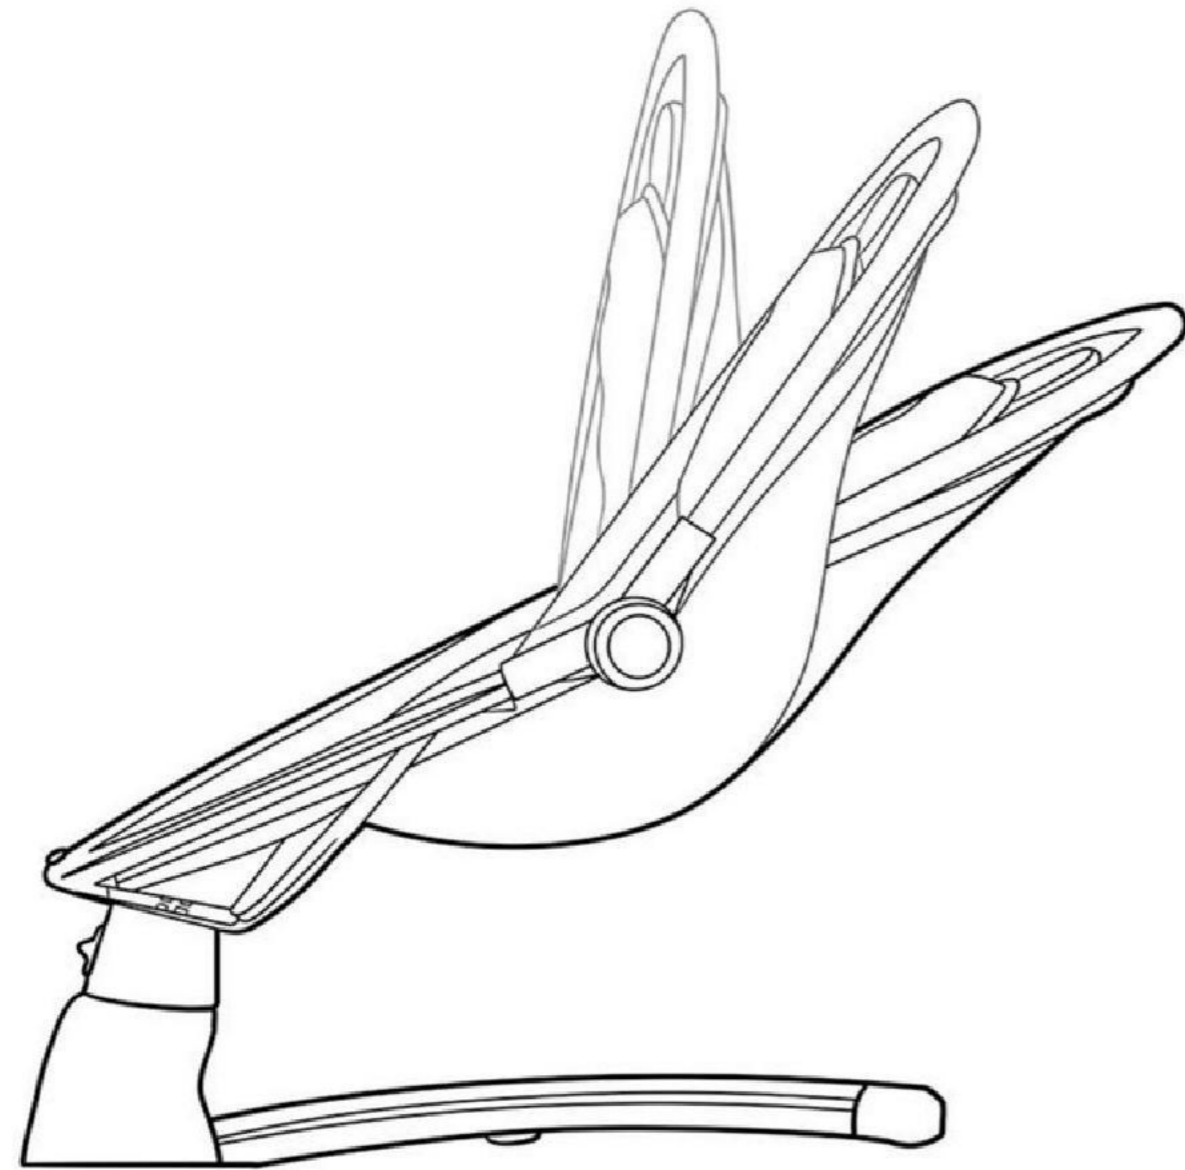


The rocking chair can be adjusted in three gears

Warning: Rocking chair is only allowed to use these three gears, other adjustments are used when packing boxes

Remote control instruction

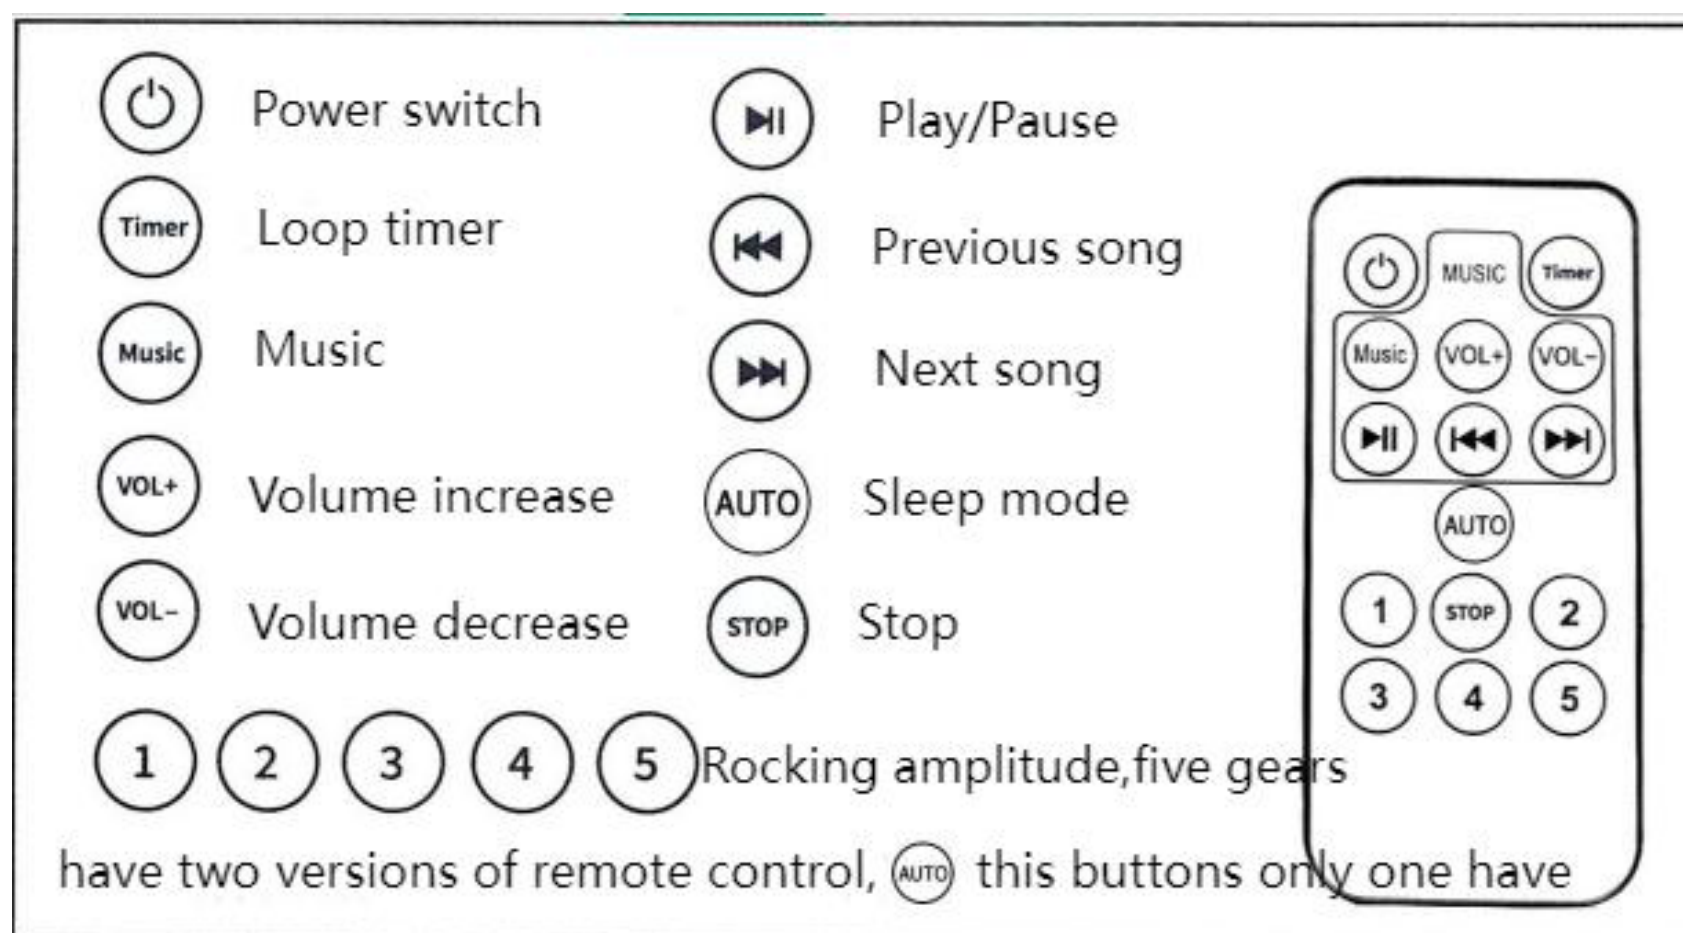

Panel Instructions

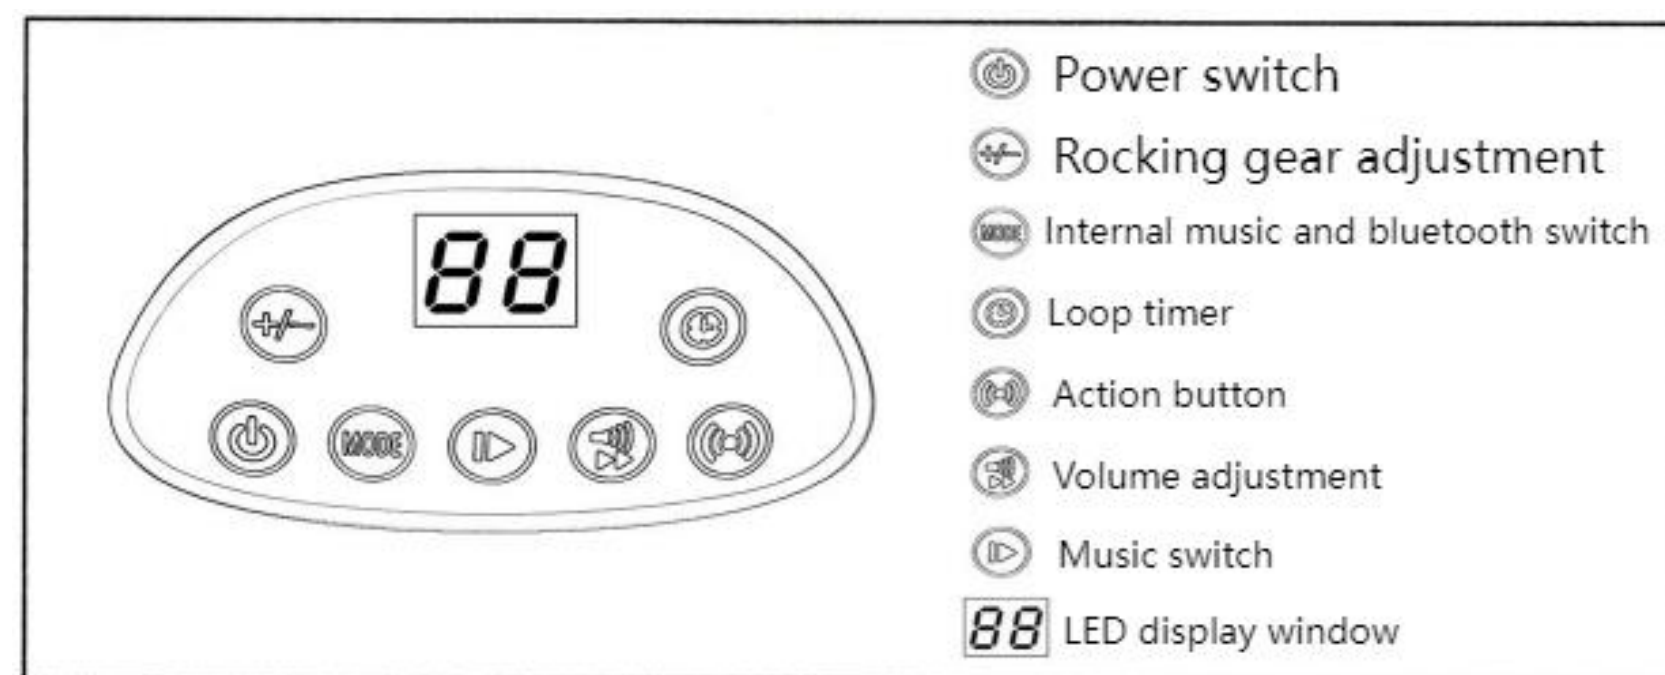

Friendly reminder: Low battery power may cause the product to rock slowly, sound and light to become weak, or the product to shut down. If this happens, please replace the battery in time.

1. Use a screwdriver to unscrew the screws on the battery box at the bottom of the seat frame to open the battery cover.
2. Follow the positive and negative indicators to place 4 size 7 batteries.
3. After installing the batteries, cover the battery cover and use a screwdriver to tighten the screws to ensure proper installation.

NOTE

1. The process of removing the battery is the opposite.
2. Batteries should only be installed by adults, keep infants and young children away from the installation site
3. Different types of batteries or new and old batteries should not be mixed.
4. Batteries should be placed with the correct polarity.
5. Batteries that are not used for a long time or are exhausted should be removed from the product, and make sure the battery cover is closed and the screws are tightened.
6. Do not short-circuit the power terminals.
7. Only recommended batteries of the same or equivalent type should be used.
8. Do not use expired batteries, old batteries, or batteries with insufficient power.
9. Non-rechargeable batteries should not be charged.
10. Rechargeable batteries should only be charged under adult supervision.
11. Rechargeable batteries should be removed from the product before charging.
12. Before disposing of the appliance, the batteries must be removed from the appliance. When removing the batteries, the appliance must be powered off.
13. Batteries should be disposed of safely, do not dispose of batteries as household waste.

Warning

△WARNING

1. Please read the manual carefully before use and keep it properly. Failure to follow the instructions may affect the safety of infants and young children.
2. This product is only for packaging and is not a toy. Do not let children play with it. To avoid suffocation, keep plastic coverings away from infants and young children.
3. This product is only for adult installation. When folding and unfolding the product, make sure your child is away from the product.
4. Do not use this product to transport infants and young children. Do not move or carry the product while in use.
5. This product must be used with maternal and child safety protection, otherwise it may be fatal!
6. When infants and young children use the elastic band, the safety belt must be used correctly and the child must not be left unattended. Do not use for infants and young children who can climb out of the seat on their own. When infants and young children can sit up, kneel, or crawl, they should no longer use this product to prevent tipping over and causing fall injuries.
7. This product is designed to carry one person, suitable for ages 0-12 months, with a rated load capacity of 9 kilograms. Do not overload.
8. This product cannot replace a crib or bed and is not suitable for long-term sleep for infants and young children. It is not for sleep use. If infants and young children need to sleep, they should be placed in a suitable crib or bed.
9. Do not use this product on inclined or unstable surfaces. Do not use this product at high places (such as tables) to prevent falling hazards.
10. Do not use this product on soft surfaces (such as beds, sofas, etc.) to prevent tipping over and causing suffocation.
11. This product is made for the functions described in the manual and should not be used for other purposes.
12. Do not squeeze, drop, or collide during transportation, installation, and use, as it may cause product damage.
13. Do not use accessories not produced or used by this product.
14. Do not drag electrical appliances from the workbench to places where children can reach.
15. Before use, please check if the product is damaged, if all parts are installed correctly, locked, and not loose, and if the power cord is intact to avoid electric shock hazards. Do not disassemble and repair by yourself. It must be replaced by the manufacturer, its repair department, or similar professional personnel.
16. Before connecting the power, please check if the voltage marked on the product matches the power supply voltage.
17. The power plug of the product must be inserted into a grounded socket and make sure it is firmly inserted.
18. Do not share the socket with other high-power electrical appliances.
19. When not in use, before disassembly and cleaning, please disconnect the power connection.
20. Please unplug the power cord by pulling the plug, do not pull the cord directly, and do not arbitrarily extend the power cord to avoid danger.
21. Do not use wet hands to plug in the power or touch the machine, as it may cause electric shock accidents.
22. Do not put the entire power cord into water or other liquids.
23. This product should be used indoors, do not use outdoors or in high-temperature environments. Keep away from fire sources, heat sources, high-temperature surfaces (such as high-temperature gases, ovens, etc.), and avoid direct sunlight.
24. Do not add additional items (such as pillows, blankets, and pads, etc.).
25. When not in use, please set the volume to a low level.

Warning

Common Faults and Troubleshooting

If there is a fault during use, to save your time, please refer to the following reasons for self-check before sending for inspection.

Fault Phenomenon	Possible Reasons	Solutions
	Power outage, power not connected	Replace new batteries, check if the external power supply has power
	Batteries not installed, or batteries installed with wrong polarity	Install batteries correctly according to the product's positive and negative indicators
	Not turned on, gear not started	Click the power button to turn on and select the gear
	Timer set to stop automatically	Restart the power and select the gear
	Rocking lock not unlocked	Push the rocking lock up
Rocking not working	Rocking blocked	Move the rocking block to automatically rock
	Rocking blocked or not installed correctly,	Refer to the manual for correct installation, after installation, display on the right diagonal, flat, moving parts run normally
	Infant's position severely deviates from the center of gravity, such as too	Place the infant in the normal position of the seat and keep the safety belt fastened
	Start mark not removed	
	Load severely exceeds the maximum load capacity	Infant's weight exceeds 9 kilograms
	Motor not rotating (no rotating sound)	
	Other abnormalities cannot be effectively controlled	Please contact customer service for repair

If the product still does not work after the above checks, please contact us, we will answer you as soon as possible.

Warning

Do not disassemble the machine by yourself, improper repair may cause danger to the user!

Table of Contents

After-sales Service

Thank you for choosing our company's product. To protect your rights, please keep the after-sales service card properly.

If there are any product quality issues, please contact the dealer.

Name		Phone	
Product Name			
Purchase Time			
Address			

Precautions

- From the date of purchase, normal users will enjoy one year of free repair service for the circuit board components, and one year of free repair service for the whole machine. The appearance plastic of the product is not covered by the warranty;
- Other consumable accessories are not covered by the warranty;
- Please present the after-sales service card and purchase receipt or invoice for valid repair service.

Non-warranty

- Damage caused by improper or incorrect use and human factors;
- Loss or damage of the after-sales service card;
- Damage caused by natural disasters and other force majeure.

Thank you for using our product. We are committed to providing better products, more considerate services, and more favorable prices to consumers. The company has more products for you to choose from!

Certificate of Conformity

Product Name: Multi-functional Electric Rocker
Product Size: 686060CM
Main Material: Aluminum Alloy, Polyester Fiber
Suitable Age: 0-12 months
Rated Load Capacity: 9KG
Rated Input Voltage: 5V=
Rated Input Current: 1000mA
Rated Power: 5W
USB Output: 5V=200mA
Inspection Result: Qualified Inspector: 06